





RAIL INSTALLATION INSTRUCTIONS




PALADIN HEALTHCARE®

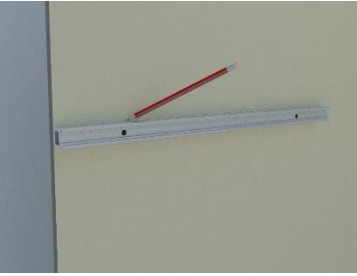

Step 1
Mark height
Level rail

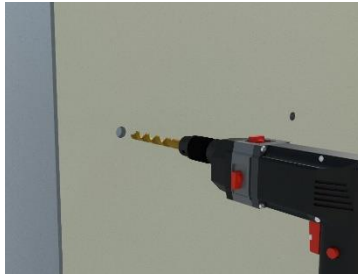


Step 2
Drill holes
Use drill bit size 1/2"

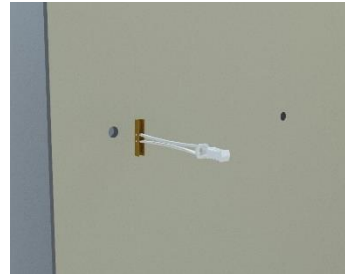


Step 3
Prepare 1/4" toggle type
wall anchors



Step 4
Insert 1/4" toggle type wall
anchors in locations as
marked

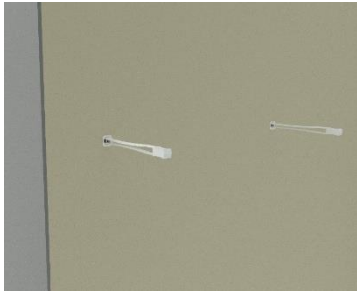


Step 5
Align and tighten
to the wall (see step 6)

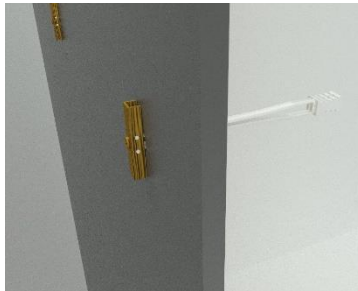


Step 6
Image for reference




Step 7
Bend until plastic cracks,
flush to the wall

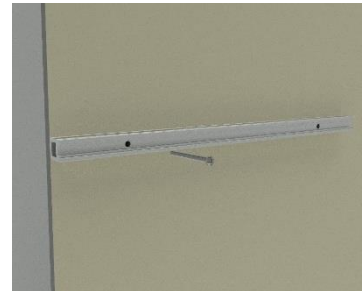


Step 8
Re-align the rail.
Insert and tighten
1/4" screws

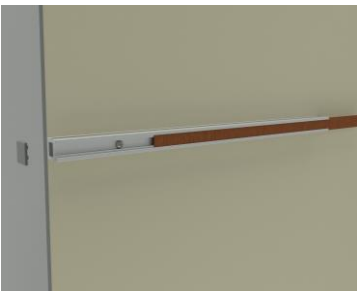

Step 9
Insert provided inlay strip
and secure end caps
on both sides

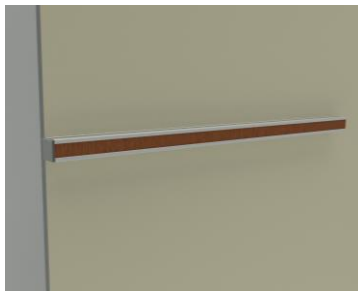

Step 10
Finished product

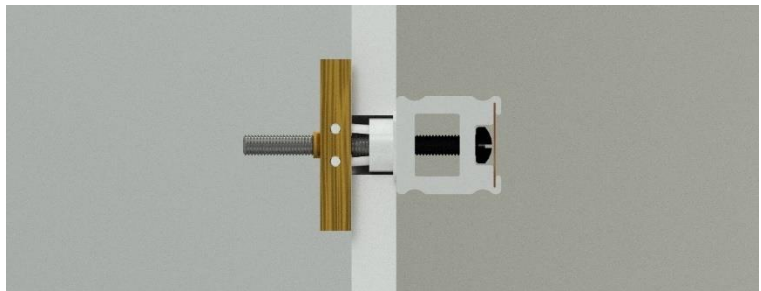

**CROSS SECTION
OF THE FINISHED PRODUCT**

