




FOR THE OFFICIAL CSI MASTER FORMAT SPECIFICATION, PLEASE REQUEST IT FROM THE MANUFACTURER.

SPECIFICATION: EVOLUTION Fairfield-Style Equipment Management Rail

By Paladin Healthcare™ LLC

PART NUMBER: R-2XX

JSN # A1132

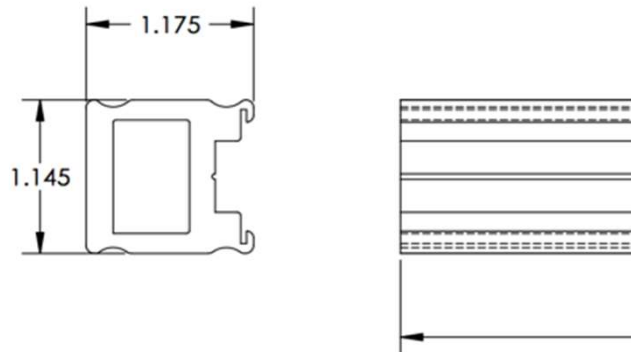

** Image shown is a seamless fit in a modular casework application and does not include end caps. **

- **EVOLUTION Equipment Management Rail:** a seamless, extruded aluminum profile with clear anodized finish containing a groove for attaching an adapter that supports the Owner supplied specified hospital accessories and equipment and includes termination caps at each end. The groove and adapters are designed so that the adaptor requires a seven degree tilt for attachment. The rail is designed to accommodate a seamless Wilsonart laminate decorative color inlay the length of the rail up to ten feet in length.
- **EVOLUTION Equipment Management Rail** shall be specified in one to ten foot lengths as shown on drawings or indicated on purchase order to accommodate room conditions. Rail will be cut to exact lengths as indicated. For lengths greater than ten feet, a JOINER piece is used to attach together multiple pieces of rail to meet the required total length. **The length of the rail is nominal for the rail only and does *not* include the end caps. Use of two end caps increases the total length of the rail by ½”.
- **EVOLUTION Equipment Management Rail** is pre-drilled on sixteen-inch centers (minimum) with the exception of a one-foot rail length which has two mounting holes drilled at eight inches on center. The Rail may also be field drilled by the installer to accommodate specific job site conditions.
- End caps shall be constructed of injected molded thermoplastic and shall resist most hospital cleaning and disinfecting chemicals. The color shall be white and molded throughout the material. End caps shall be friction-fit without use of fastening devices.
- Decorative inlay shall be supplied by Paladin for installation by the owner or contractor. Inlay is Wilsonart laminate in the standard finish which will resist most hospital cleaning and disinfecting chemicals. Color shall specified by the Owner. Specialty coating finishes can be made available for additional cost and lead time. Alternate laminate manufacturers may be specified for additional cost and lead time. Contact manufacturer for details.
- Option to powder coat rail with anti-microbial finish (AMF) in select colors. Contact manufacturer for details.